



J5 wiring: J5.1 (+5V) -> relay module COM screw. Relay NO screw -> J5.2. Pump then connects at J3 (1 = +, 2 = GND).